


Manual Assembly of 1" Buttons




Button Front



Mylar Cover

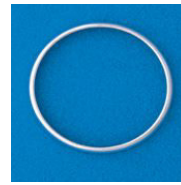



Button Ring

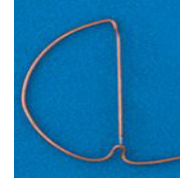

Pin

Cutting your Image

- Cut your image into strips and insert your printed button designs through the button die cutter.
- Center the design in the circle of the die cutter.
- Pull the red handle all the way down
- Push the silver bar from the bottom to remove the design.


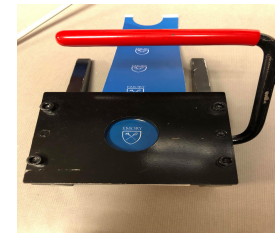
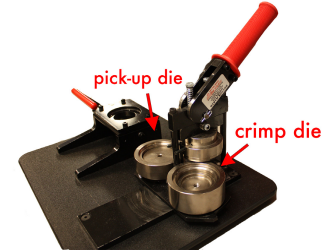


Putting it All Together

- Place button front edge side down on the pick-up die on the left side of the button maker.
- Place your image on top of the button front so that it is facing you.
- Place a mylar cover on top of the image.
- Place a button ring into the crimp die, edge facing up.

Make sure that there is only one of each part in the button maker

- Rotate the pick-up die containing the image so that it is underneath the press.
- Pull the handle all the way down.
- Lift the handle again. You will notice that the materials in the pick-up die have been picked up by the button maker.
- Rotate the die table 180 degrees so that the crimp die is now under the handle.
- Pull the handle all the way down, and then lift.

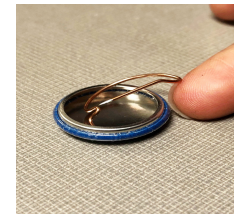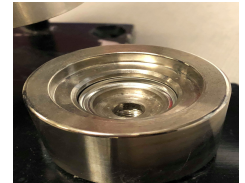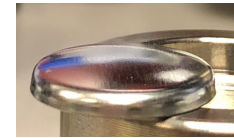

Making a Pin

- Remove the button from the press and flip it over.
- Insert the pin part as shown in the image.
- Your button is now complete!

Making a Magnet

- Remove the button from the press and flip it over.
- Remove the paper backing from the magnet and stick it on the button
- Your button is now complete!

